HOME
DECORATORS
COLLECTION

BF-22727 OXFORD COLLECTION 6 DOORS CABINET

INV#64911

ASSEMBLY INSTRUCTIONS

Made In China

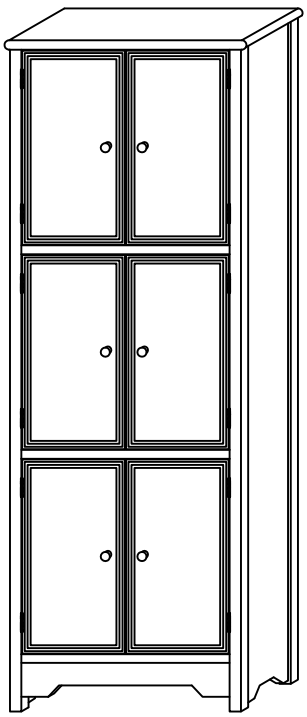

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts, which may have loose inside the carton during shipment. Once uppacked, compare all parts and hardware to the provided list to be sure all parts are present. If any parts or hardware are missing or damaged, please phone, e-mail or fax our Custormer service Department. For speady service, please provide your order number, item number and part number/letter of the part needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B 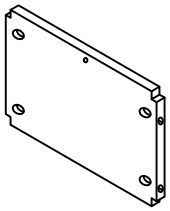 BOTTOM PANEL-1PC	C 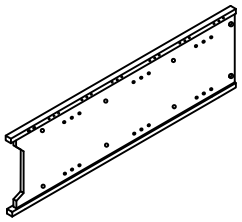 LEFT SIDE PANEL-1PC
D 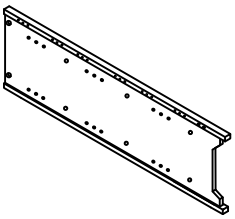 RIGHT SIDE PANEL-1PC	E 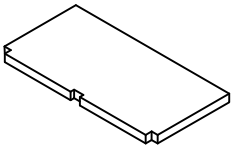 SHELF-3PCS	F 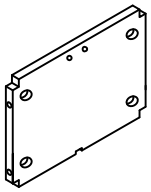 ACROSS PANEL-2PCS
G 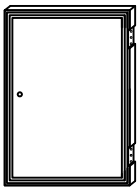 RIGHT DOORS-3PCS	H 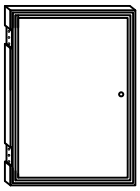 LEFT DOORS-3PCS	I  BACK PANEL-2PCS
J 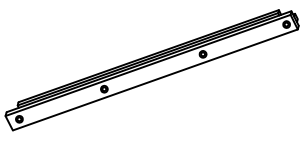 REAR PANEL GUIDE-1PC	K 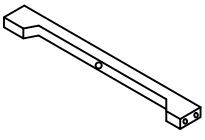 LOW PANEL-1PC	L DOWELS-4PCS

M  LARGE MAGNETS-3PCS	N  FEMALE MAGNETS-6PCS	O 8mm × 1"  SCREW-1PC
P 5mm × 1/2" SCREWS-78PCS	Q  HINGES-12PCS	R 6mm × 1/2" SCREWS-44PCS
S 6mm × 3/4"  SCREWS-4PCS	T CAM-TOOL-1PC	U SHELF SUPPORTS-12PCS
V CAM-LOCKS-16PCS	W  CAM-BOLTS-16PCS	X 8mm × 5/8" SCREWS-6PCS
Y KNOB-6PCS	Z prevent fall down HOOK-2PCS	A1 prevent fall down 6mm × 3/4" SCREWS-2PCS
B1 prevent fall down HANGER-2PCS	C1 prevent fall down 7mm × 7/8" SCREWS-2PCS	

REMARK: THE LETTER STICKED IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

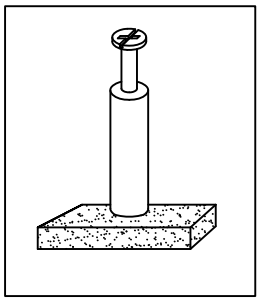

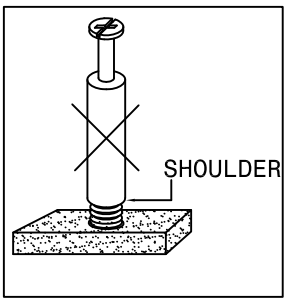

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

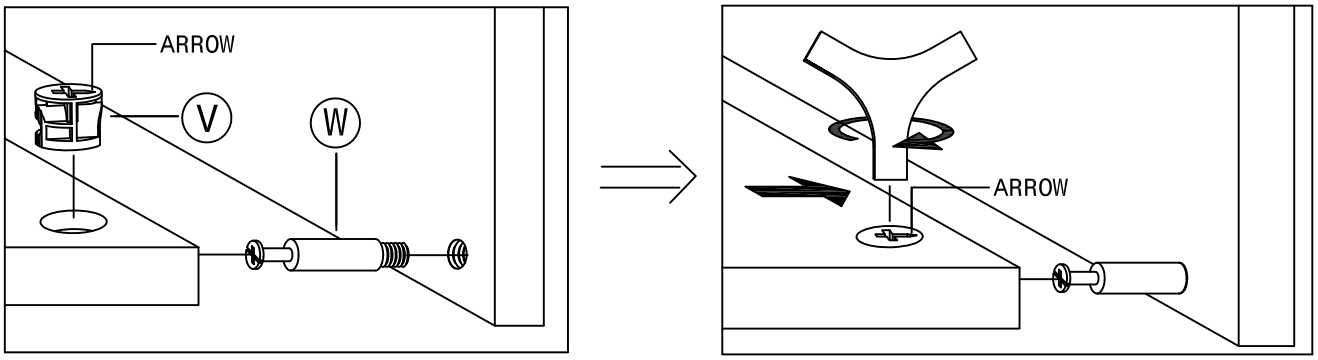

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

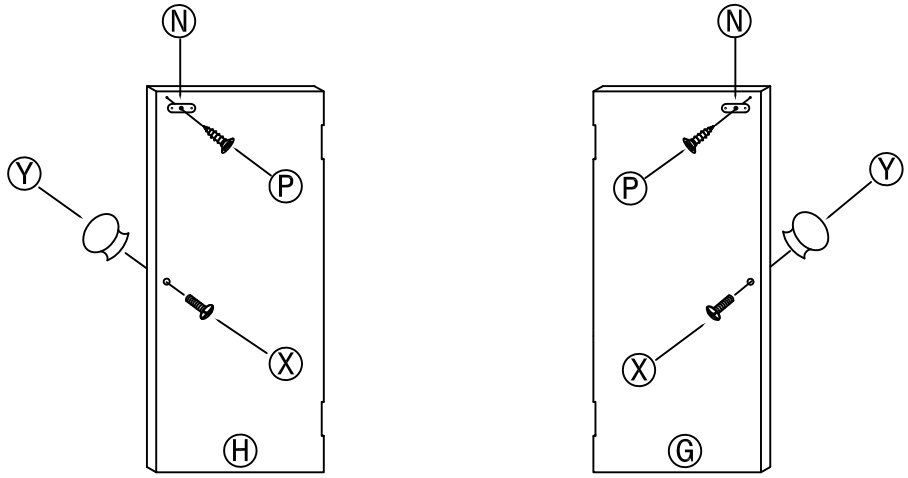

1).ASSEMBLE THE DOORS(G/H).

- ATTACH THE FEMALE MAGNET(N)TO DOORS(G/H)USING SCREWS(P).
- ATTACH THE KNOB(Y)TO DOORS(G/H)USING SCREWS(X).

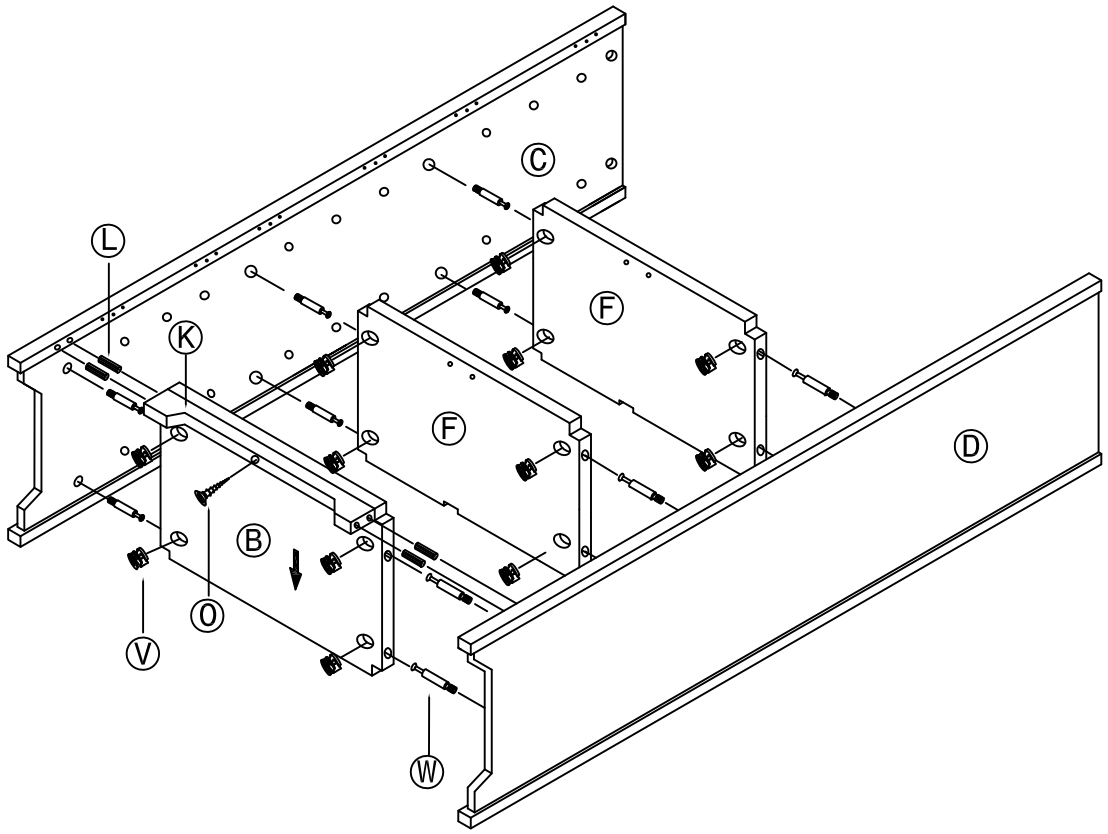

2).ASSEMBLE THE SIDE PANEL(C/D).

- ATTACH LOW PANEL(K)TO BOTTOM PANEL(B)USING SCREW(O).
- INSERT THE 4 DOWELS(L)INTO HOLES IN LOW PANEL(K).
- ROTATE THE CAM-BOLTS(W)INTO HOLES IN SIDE PANEL(C/D).
- PLACE CAM-BOLTS(W)INTO HOLES IN PANEL(B/F)AND ATTACH USING 12 CAM-LOCKS(V).

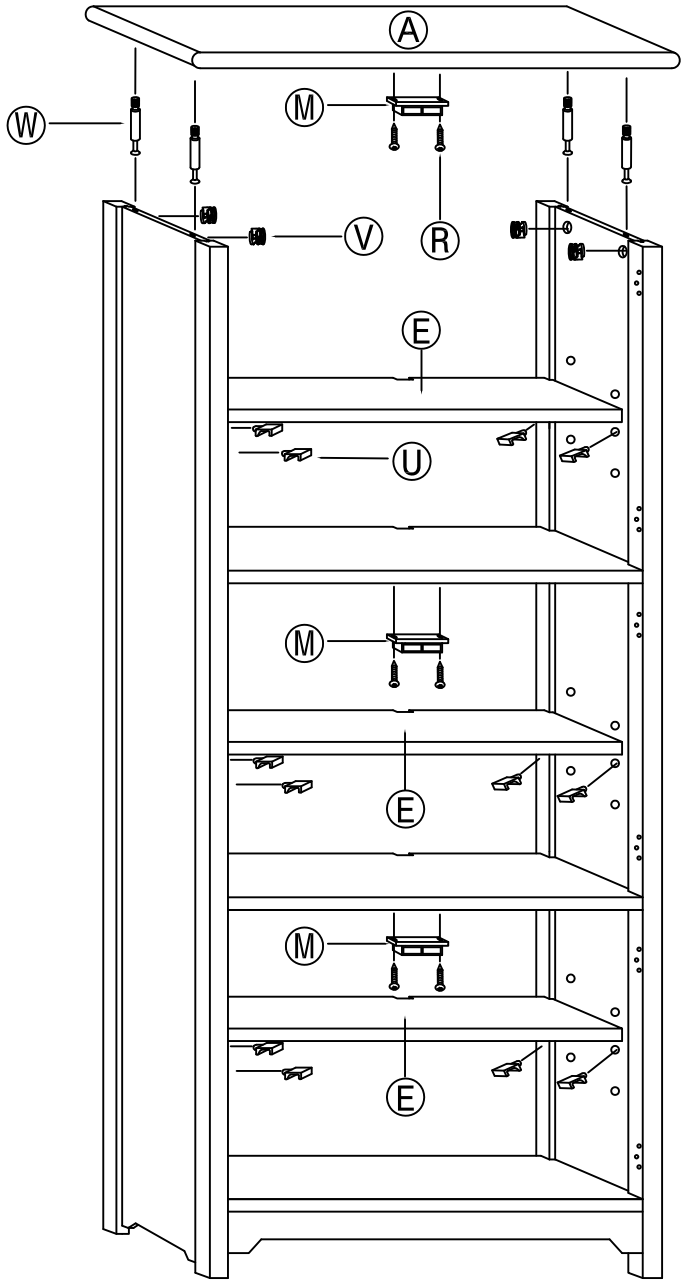

3).ASSEMBLE THE TOP PANEL(A).

- ATTACH LARGE MAGNETS(M)TO TOP/ACROSS PANEL(A/F)USING 6 SCREWS(R).
- ROTATE THE CAM-BOLTS(W)INTO HOLES IN TOP PANEL(A).
- PLACE CAM-BOLTS(W)INTO HOLES IN SIDE PANEL(C/D)AND ATTACH USING 4 CAM-LOCKS(V).
- INSERT 12 SHELF SUPPORTS(U)INTO HOLES IN PANEL(C/D)AND PUT 3 SHELF(E) ONTO THEM.

NOTE:Attach the left door(H)by the same method as the right door(G)with screws and hinges.

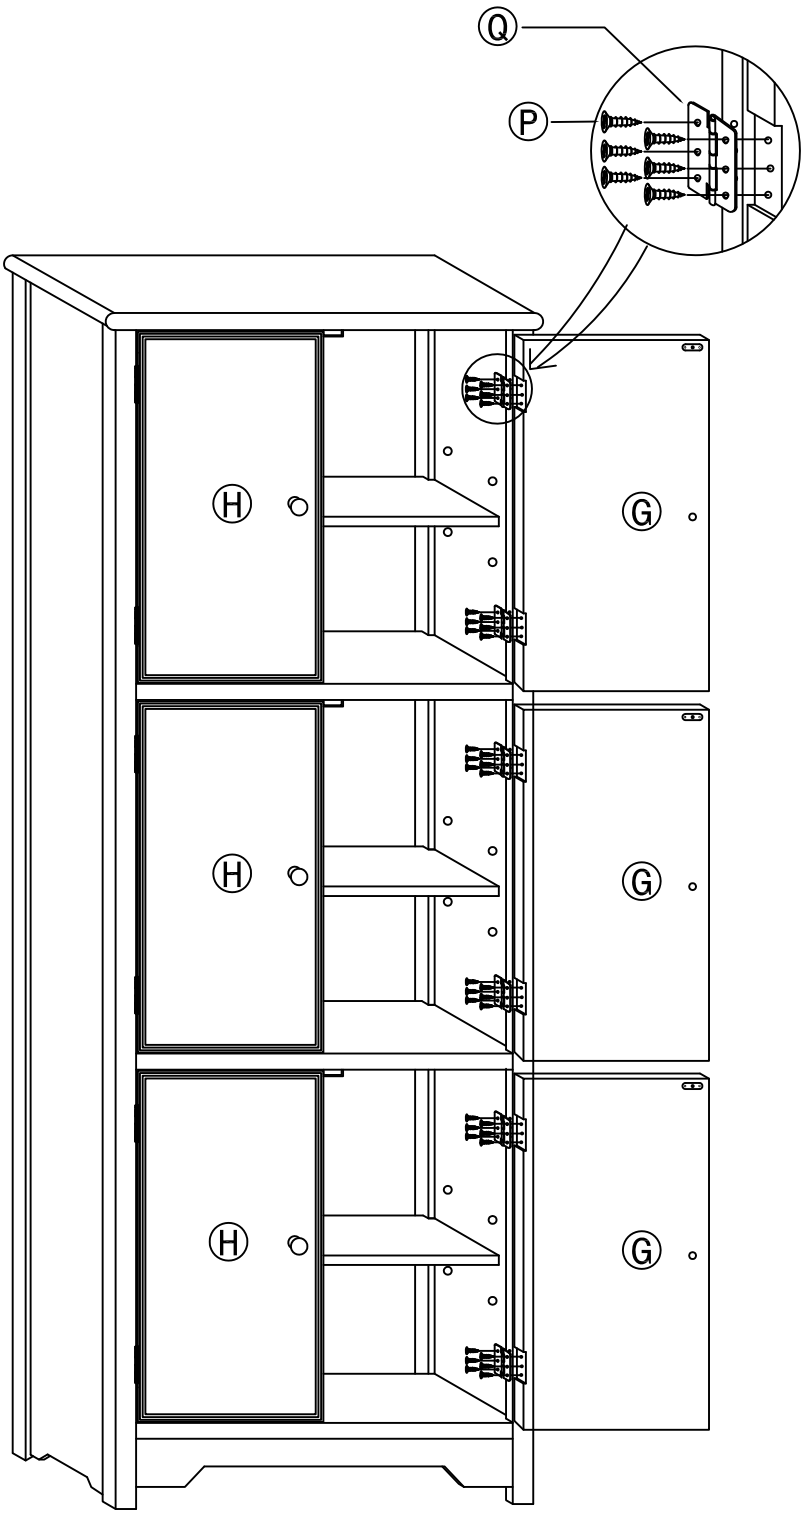

4).ASSEMBLE THE DOORS(G/H).

- ATTACH 6 HINGES(Q)TO RIGHT DOORS(G)AND RIGHT SIDE PANEL(D)USING 36 SCREWS(P).

Note:Before you assemble the back panel,please make sure the doors have an even gap around them.If uneven,shift the unit LEFT OR RIGHT UNTIL the doorsare evenly spaced,then attach back panel.

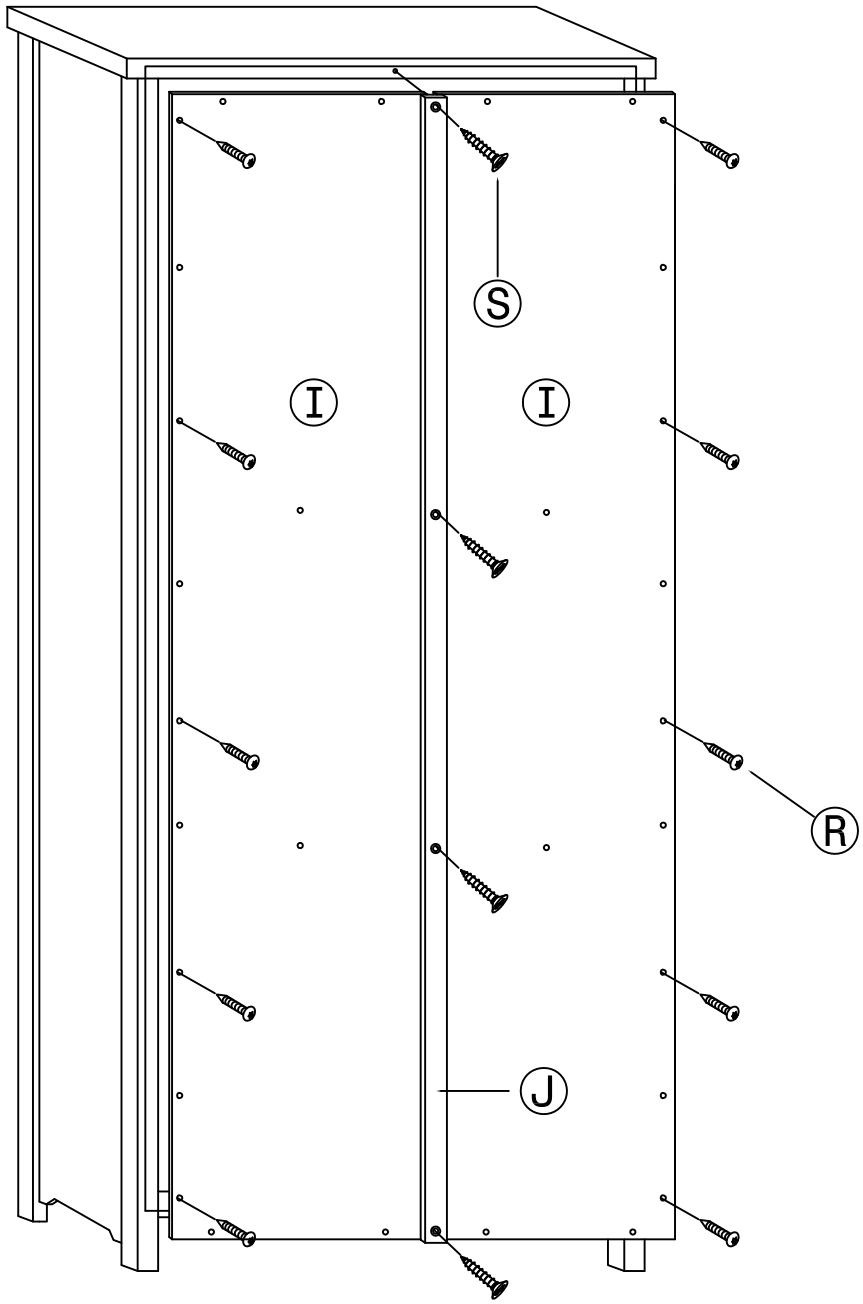

5).ASSEMBLE THE BACK PANEL(I).

- INSERT THE BACK PANEL(I)INTO SLOT IN REAR PANEL GUIDE(J).
- ATTACH THE BACK PANEL(I)AND REAR PANEL GUIDE(J)USING SCREWS(R/S).

I ● ATTACH 2 HOOK(Z)USING 2 SCREWS(A1)IN THE PREDRILLED HOLES OF REAR TOP PANEL.

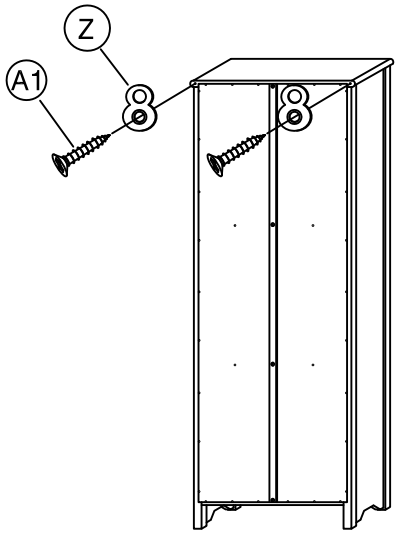

II ● DRILLING TWO HOLES ON THE WALL IT AS BETWEEN TOP PANEL HOLES DISTANCE.

● PUT 2 HANGER(B1)HIT INTO HOLES IN WALL AND ROTATE 2 SCREWS(C1)INTO HANGER(B1).